To minimize the likelihood of fatal system errors, take these precautions when removing failed drives:

- Do not remove a degraded drive if any other member of the array is offline (the Online LED is off). In this condition, no other drive in the array can be removed without data loss.

  There are some exceptions:

  — When RAID 1+0 is used, drives are mirrored in pairs. Several drives can be in a failed condition simultaneously (and they can all be replaced simultaneously) without data loss, as long as no two failed drives belong to the same mirrored pair.

  — When RAID ADG is used, two drives can fail simultaneously (and be replaced simultaneously) without data loss.

  — If an online spare has an unlit Online LED (it is offline), the degraded drive can still be replaced.

- Do not remove a second drive from an array until the first failed or missing drive has been replaced **and** the rebuild process is complete. (When the rebuild is complete, the Online LED on the front of the drive stops blinking.)

  There are some exceptions:

  — In RAID ADG configurations, any two drives in the array can be replaced simultaneously.

  — In RAID 1+0 configurations, any drives that are not mirrored to other removed or failed drives can be simultaneously replaced offline without data loss.

Moving Drives and Arrays

Drives can be moved to other ID positions on the same array controller. You may also move a complete array from one controller to another (even if the controllers are on different servers). However, if you combine arrays that were on different controllers into one larger array on a single controller, the data on the arrays is lost.

Intrduction

- Product Overview

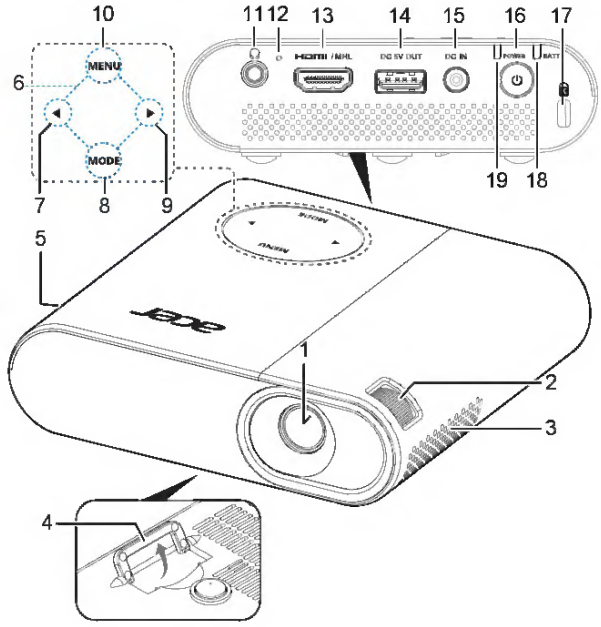

#	Description	#	Description
1	Projection lens	11	Headphone
2	Focus ring	12	Reset hole
3	Air inlet	13	HDMI/MHL connector
4	Tilt adjusting wheels / Flipping handle	14	5V DC output connector
5	Air outlet	15	DC input
6	Direction keys	16	Power button
7	Volume Down	17	Kensington™ lock port
8	MODE/Confirmation	1B	Battery Indicator LED
9	Volume UP	19	Power/Charge Indicator LED
10	MENU/Exit		

- Power

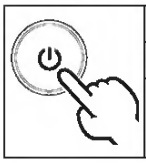	Power On	Long press >1s
	Power Off	Short press <1s twice
	Power bank On /Off	Short press <1s under battery mode

- Output power state

	Power On		Power Off	
	Power adaptor	Power Battery	Power adaptor	Power Battery
DC 5V OUT	5V	5V	5V	5V
MHL	5V	5V	X	X
HDMI	X	X	X	X

Note: When MHL is connected to the projector, the DC 5V OUT will not work.

- Battery discharge time under Display mode

	Eco	Standard	Bright
HDMI [#1]	O	O	O
Battery life [#2] (Hour)	4.5	3	2

Note:
[#1] 1920x1080@60Hz
[#2] DC5V output off

- Compatibility modes

A. HDMI-PC	
Resolution	Refresh rate (Hz)
SVGA/XGA/WXGA/10B0p	60
B. HDMI-Video (MHL)	
Resolution	Refresh rate (Hz)
4B0i/4B0p/720p/10B0i/10B0p*	60
576i/576p/720p/10B0i/10B0p*	50
10B0p	24

Note: * MHL is not supported.

- LED indicator / Message

Battery status	Charging	Completed
POWER_LED	Red	Blue
Battery level	**BATT_LED**	**Message**
70%~100%	Green	The projector will automatically shutdown after: (seconds)
40%~70%	Orange	
5%~40%	Red	
< 5%[#1]	Red (flashing) (0.5s On/0.5s Off)	10s
Fan fail[#2]	Red (flashing) (1s On/0.5s Off)	30s
Projector overheated[#2]	Red (flashing) (0.5s On/1s Off)	30s
Battery Overheat	Orange (flashing)	--

Note:
[#1] The projector will automatically shutdown after event.
[#2] The projector will automatically shutdown before event.

Reminder & Maintenance

1. This product can be installed in the desktop only, otherwise lamp life could decrease dramatically.
2. Keep the power more than 30% always for better cell life.
3. Fully recharge the power bank at least every 3 months.
4. Protect from moisture and corrosive materials.
5. The projector will automatically shutdown when there is no signal input after 15 minutes.
6. The projector will automatically enter Eco mode for power saving power if there is no any signal input after 5 minutes.
7. With fast charging technology, the battery power level will increase from 5% to B0% in approximately 3 hours and 30 minutes, and to 100% in approximately 4 hours and 45 minutes.

B. The battery capacity will be decreased by longer time and more recycling times.

Downloaded from www.Manualslib.com manuals search engine

1. Display
3 1/2 digit, 7 segment, 15mm high LCD.

2. Back light (option)
When this button is pushed, the Back light of display is on. After about 5 seconds, the Back light is self-oft. The Back light is on again, just push this button once.

3. Function and range switch
This switch is used to select functions and desired ranges as well as to turn on/off the meter.

4. Hold function
When this button is pushed, the display will keep the last reading and "H" symbol will appear on the LCD until pushing it again.

5. "10A" jack
Plug in connector for red test lead for 10A measurement

6. "COM" jack
Plug in connector for black (negative) test lead.

7. VΩmA jack
Plug in connector for red (positive) test lead for voltage, resistance and current (except 10A) measurements

Downloaded from www.Manualslib.com manuals search engine

INSPECTION, MAINTENANCE & STORAGE

INSPECT YOUR TOTAL GYM® POWER PLATINUM PRIOR TO EACH USE

Before using your Total Gym® Power Platinum for your workout session, be sure to make the following inspection:

- Make sure the equipment is fully opened and sitting on a solid, level surface with plenty of clearance on all sides. Unit should be used on a mat or on carpeted surfaces only.
- Make sure all the Pins are securely in place and locked into position.
- Check that the Pulley is attached securely to the loop on the top underside of the Glideboard.
- Check that the Cable is traveling correctly in the groove of each Pulley.
- Make sure the Cable is securely fastened to each Handle.
- Check that the Wing Attachment or other accessories are installed correctly when in use.
- Make sure the Glideboard is gliding smoothly along the Rails.

ROUTINE MAINTENANCE

- Wipe down your Total Gym® Power Platinum on a regular basis using a clean cloth and alcohol or alcohol-based products like Windex® or 409®. Do not leave towels or workout clothing laying or hanging on the equipment.
- Periodically check the following parts for signs of fraying or other wear: the Cable, Pulleys, Wheels, Glideboard, accessories and Rails. If the Cable, Pulleys, Rails or Wheels need replaced – do not use your unit, wait until the part is replaced. If any other part than the ones listed above needs to be replaced, do not use that part until it is replaced.
- Never use a lubricant such as WD-40® or ArmorAll® to lubricate or clean the unit. Use only 3-in-1® oil or machine oil to lubricate the axles of the wheel or pulley, not the roller surface.

TO STORE YOUR TOTAL GYM® POWER PLATINUM

Follow these easy steps to store your exerciser properly:

1. Remove all accessories and attachments.
2. Be sure the Pulley is attached to the underside of the Glideboard for folding.
3. Remove "C" Pin located at the bottom of the Vertical Column.
4. Position one foot on Back Crossbar to keep the unit from lifting off the floor. With one hand on the Rail, grasp the Hitch Pin with Lanyard and pull it out from the Vertical Column. Slowly lower the Rails until they rest on the Back Crossbar.

PROOUCT SPECIFICATIONS

LENGTH: folded 45-1/4"
in use 80-3/4"

HEIGHT: folded 7"
in use 37-1/2"

WIDTH: 14-1/4"

WEIGHT: 55 lbs.

MAXIMUM USER WEIGHT: 275 lbs.

Includes Workout DVD

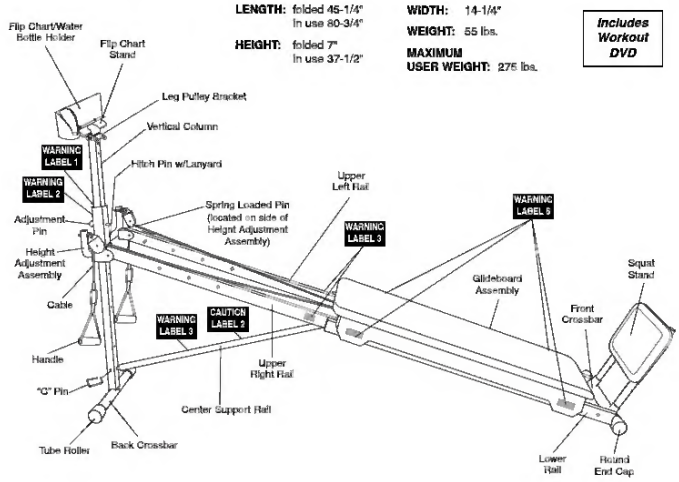

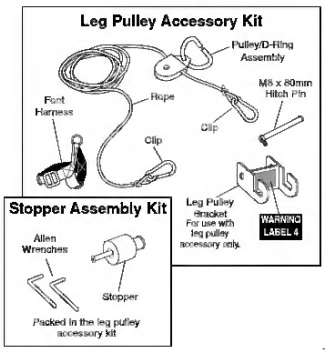

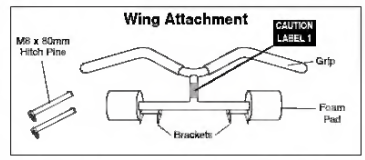

Downloaded from www.Manualslib.com manuals search engine

and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

Mains fuse (UK only)

This TV is fitted with an approved moulded plug. Should it become necessary to replace the mains fuse, this must be replaced with a fuse of the same value as indicated on the plug (example 10A).

1 Remove fuse cover and fuse.

2 The replacement fuse must comply with BS 1362 and have the ASTA approval mark. If the fuse is lost, contact your dealer in order to verify the correct type.

3 Refit the fuse cover.

In order to maintain conformity to the EMC directive, the mains plug on this product must not be detached from the mains cord cable.

Copyright

VESA, FDMI and the VESA Mounting Compliant logo are trademarks of the Video Electronics Standards Association.

® Kensington and Micro Saver are registered US trademarks of ACCO World Corporation with issued registrations and pending applications in other countries throughout the world.

DOLBY DIGITAL PLUS

Manufactured under licence from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Note

- Only applicable to TVs supporting MPEG4-HD standard

All other registered and unregistered trademarks are the property of their respective owners.

English

Downloaded from www.Manualslib.com manuals search engine

Quick installation

The first time you switch on the television, a menu appears on the screen and the tuning starts automatically.

If the menu is not displayed, press and hold down the ◢- and ◢+ keys on the TV set for 5 seconds to start the tuning.

All the available TV programs and radio stations * will be stored. This operation takes a few minutes. The display shows the progress of the search and the number of programs found.

At the end of the search, the menu disappears.

To exit or interrupt the search, press (MENU).

If no program is found, consult the possible solutions p. 12.

❶ If the transmitter or cable network sends the automatic sort signal, the programs will be numbered correctly. In this case, the installation is complete.

❷ If this is not the case, you need to use the **Sort** menu to number the programs correctly.

Some transmitters or cable networks broadcast their own sort parameters (region, language, etc.). In this case, indicate your choice using the (^)(v) *keys and validate with* (>).

* *Only on versions equipped with a radio.*

Program sort

❶ Press key (MENU). The **Main menu** is displayed on the screen.

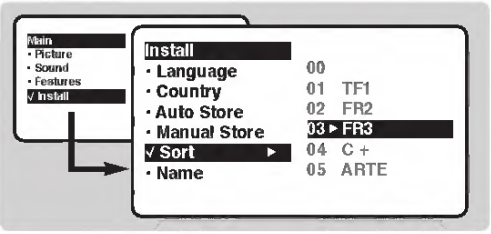

❷ With the cursor, select the **Install** menu followed by the **Sort** menu.

❸ Select the programme you want to move using the (^)(v) keys and press (>).

❹ Then use the (^)(v) keys to select the new number and validate with (<).

❺ Repeat steps ❸ and ❹ for each program you wish to renumber.

❻ To quit the menus, press (⊞).

Program name

If required, you can give a name to the programmes and external connectors.

Note: on installation, the programs are named automatically when an identification signal is sent.

❶ Press the (MENU) key.

❷ With the cursor, select the **Install** menu, then **Name**

❸ Use the (^)(v) keys to select the programme to name or rename.

❹ Use the (<)(>) keys to move around the name display area (5 characters) and the (^)(v) keys to select the characters.

❺ When the name has been entered, use the (<) key to exit. The name is stored.

❻ Repeat steps ❸ to ❺ for each programme you wish to name.

❼ To quit the menus, press (⊞).

Downloaded from www.Manualslib.com manuals search engine

Adjusting the TV

The control buttons you need to store TV stations on program numbers are on the front of the TV.

TV To store TV stetions on program numbers
(Upto 40 TV stations can be stored on program numbers using the following method.)

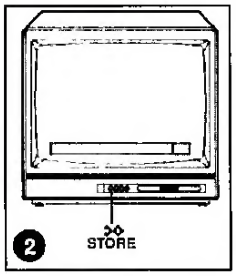

1. Press the ◇◇ STORE button, so thet the moving bar and other information is displayed on the screen.

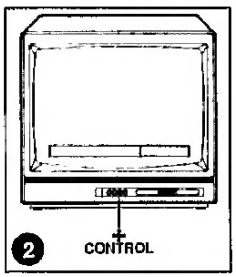

2. Press the + CONTROL button so that the TV automatically searches until a TV station is found and displayed on the screen.
If you want to continue searching for a specific TV station then press the + CONTROL button again.

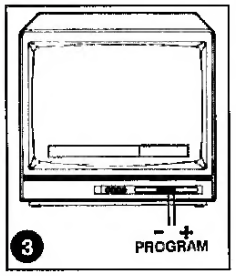

3. Select the required program number (0 to 39) by pressing the - or + PROGRAM button. The selected program number is displayed on the screen.

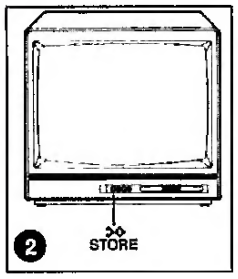

4. Press the ◇◇ STORE button to store this selection. The moving bar and other information is now removed from the screen.

Repeat steps 1 to 4 until all the TV stations you require have been stored on program numbers.

note: You can write your TV station selections in the table provided in the inside cover.

Operating the TV

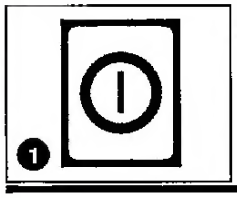

You can now operate your TV either using the remote control handset or directly using the TV buttons.
- Switch on the TV by pressing the ⏻ POWER button on the front of the TV. The TV stetion stored on program number 1 is automatically selected.

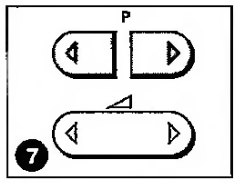

To select TV stations using the remote control handset
- Press the ▷ P button to select a TV station stored on a higher program number.
- Press the ◁ P button to select a TV station stored on a lower program number.

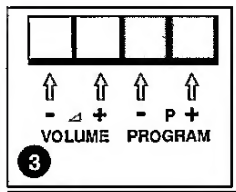

TV To eelect TV etetione using the TV buttons
- Press the + PROGRAM button to select a TV station stored on a higher program number.
- Press the - PROGRAM button to select a TV station stored on a lower program number.

TV To change and store the picture and sound settings
(When the TV is first switched on the picture and sound settings are at certain values; initially these values have been stored by the factory, but you can store your own 'personal preferences' using the 'On-Screen-Menu'.)

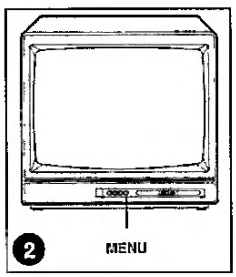

- Press the MENU button to select the first item in the menu.

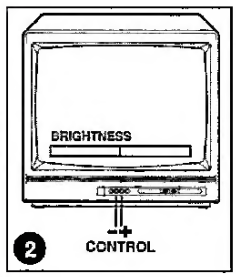

The brightness:
- Press the + CONTROL button to increase the brightness.
- Press the - CONTROL button to decrease the brightness.

Downloaded from www.Manualslib.com manuals search engine

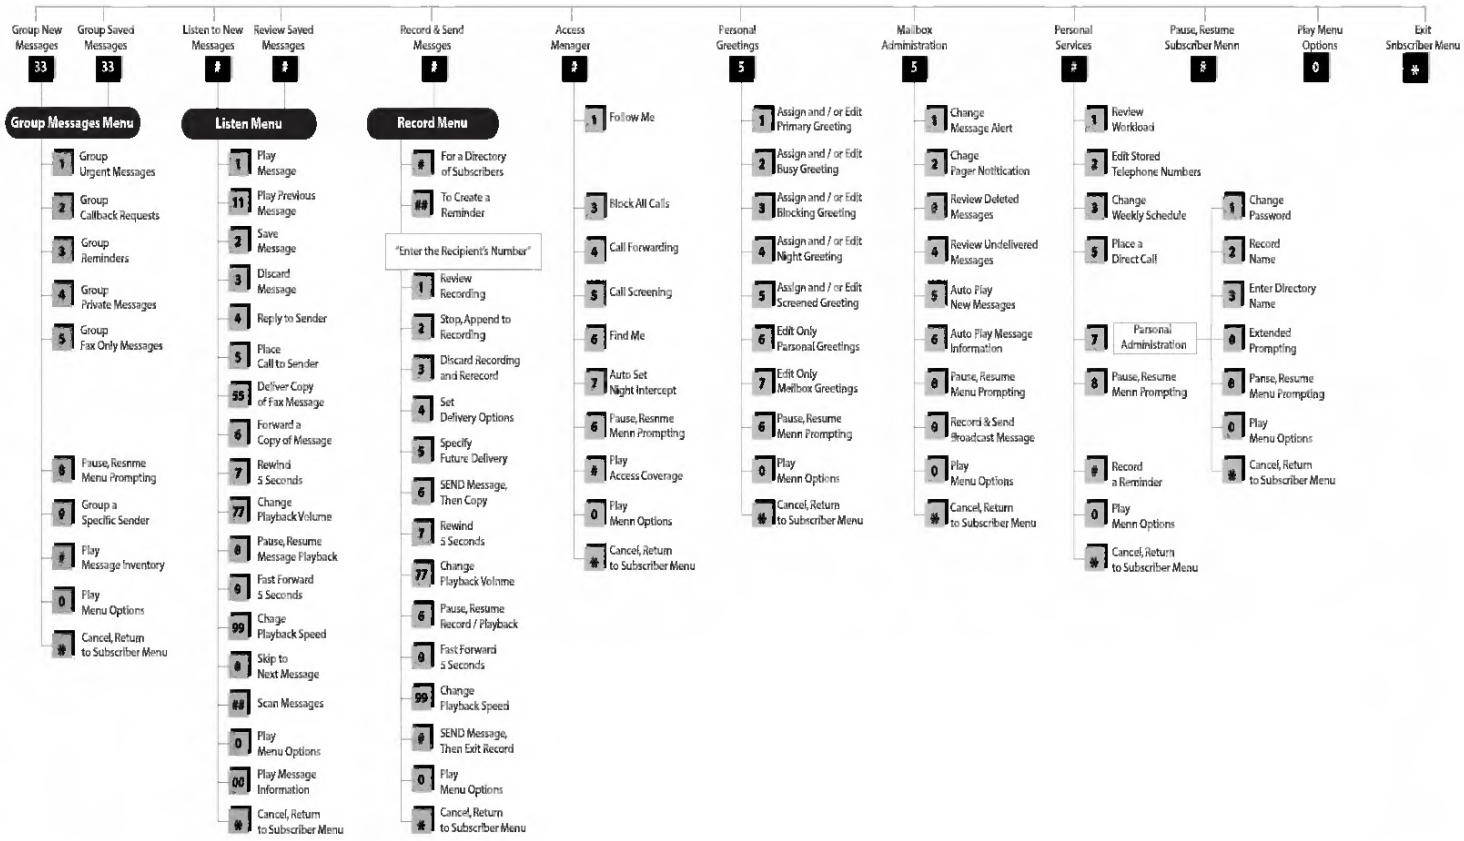
Group New Messages
33
Group Saved Messages
33
Group Messages Menu
1 Group Urgent Messages
2 Group Callback Requests
3 Group Reminders
4 Group Private Messages
5 Group Fax Only Messages
8 Pause, Resume Menu Prompting
9 Group a Specific Sender
Play Message Inventory
0 Play Menu Options
* Cancel, Return to Subscriber Menu
Listen to New Messages
#
Review Saved Messages
#
Listen Menu
1 Play Message
11 Play Previous Message
2 Save Message
3 Discard Message
4 Reply to Sender
5 Place Call to Sender
55 Deliver Copy of Fax Message
6 Forward a Copy of Message
7 Rewind 5 Seconds
77 Change Playback Volume
8 Pause, Resume Message Playback
9 Fast Forward 5 Seconds
99 Chage Playback Speed
Skip to Next Message
Scan Messages
0 Play Menu Options
00 Play Message Information
* Cancel, Return to Subscriber Menu
Record & Send Messges
#
Record Menu
For a Directory of Subscribers
To Create a Reminder
"Enter the Recipient's Number"
1 Review Recording
2 Stop, Append to Recording
3 Discard Recording and Rerecord
4 Set Delivery Options
5 Specify Future Delivery
6 SEND Message, Then Copy
7 Rewind 5 Seconds
77 Change Playback Volume
8 Pause, Resume Record / Playback
9 Fast Forward 5 Seconds
99 Change Playback Speed
SEND Message, Then Exit Record
0 Play Menu Options
* Cancel, Return to Subscriber Menu
Access Manager
3
1 Follow Me
3 Block All Calls
4 Call Forwarding
5 Call Screening
6 Find Me
7 Auto Set Night Intercept
8 Pause, Resme Menn Prompting
Play Access Coverage
0 Play Menn Options
* Cancel, Return to Subscriber Menu
Personal Greetings
5
1 Assign and / or Edit Primary Greeting
2 Assign and / or Edit Busy Greeting
3 Assign and / or Edit Blocking Greeting
4 Assign and / or Edit Night Greeting
5 Assign and / or Edit Screened Greeting
6 Edit Only Personal Greetings
7 Edit Only Mailbox Greetings
8 Pause, Resume Menn Prompting
0 Play Menn Options
* Cancel, Return to Subscriber Menu
Mailbox Administration
5
1 Change Message Alert
2 Chage Pager Notification
3 Review Deleted Messages
4 Review Undelivered Messages
5 Auto Play New Messages
6 Auto Play Message Information
8 Pause, Resume Menu Prompting
9 Record & Send Broadcast Message
0 Play Menu Options
* Cancel, Return to Subscriber Menu
Personal Services
#
1 Review Workload
2 Edit Stored Telephone Numbers
3 Change Weekly Schedule
5 Place a Direct Call
7 Personal Administration
8 Pause, Resume Menn Prompting
Record a Reminder
0 Play Menn Options
* Cancel, Return to Subscriber Menu
Pause, Resume Subscriber Menn
8
1 Change Password
2 Record Name
3 Enter Directory Name
8 Extended Prompting
8 Panse, Resume Menu Prompting
0 Play Menu Options
* Cancel, Return to Subscriber Menu
Play Menu Options
0
Exit Snbscriber Menu
*

Samsung Voicemail Services Menu

Downloaded from www.Manualslib.com manuals search engine

About This Guide

This section identifies the audience of this guide and describes the contents (chapter-by-chapter) and structure. In addition, this section includes a list of associated documents and the conventions used in this guide.

Intended Audience

This guide is intended for installers and operators of the RAID Array 3000 Controller Shelf. Installing the shelf requires a general understanding of basic SCSI terminology and product installation procedures.

Document Structure

This guide contains the following chapters:

Chapter 1: Product Overview

Product Overview provides an overview and a physical hardware description of the RAID Array 3000 controller shelf. It includes the major features, a brief description of the major components, a series of controller shelf-to-host connection diagrams, and the specifications for the shelf.

Chapter 2: RAID Array Controller

RAID Array Controller describes the major features and characteristics of the controller in the RAID Array 3000. It also lists the RAID levels supported by the subsystem and a brief description of each level. Redundant operation and environmental considerations (i.e. backup power management, voltages, and temperature) are covered at the end of the chapter.

Chapter 3: Installation and Maintenance

Installation and Maintenance recommends how to install the controller and device expansion shelves in a rackmount RETMA or metric cabinet. The information covers both single and multiple device expansion shelf installations. The chapter also describes how to interpret the status and power LEDs on the front panel, how to replace a Field Replaceable Unit (FRU), and how to add or replace a SIMM module in the RAID controller.

Downloaded from www.Manualslib.com manuals search engine

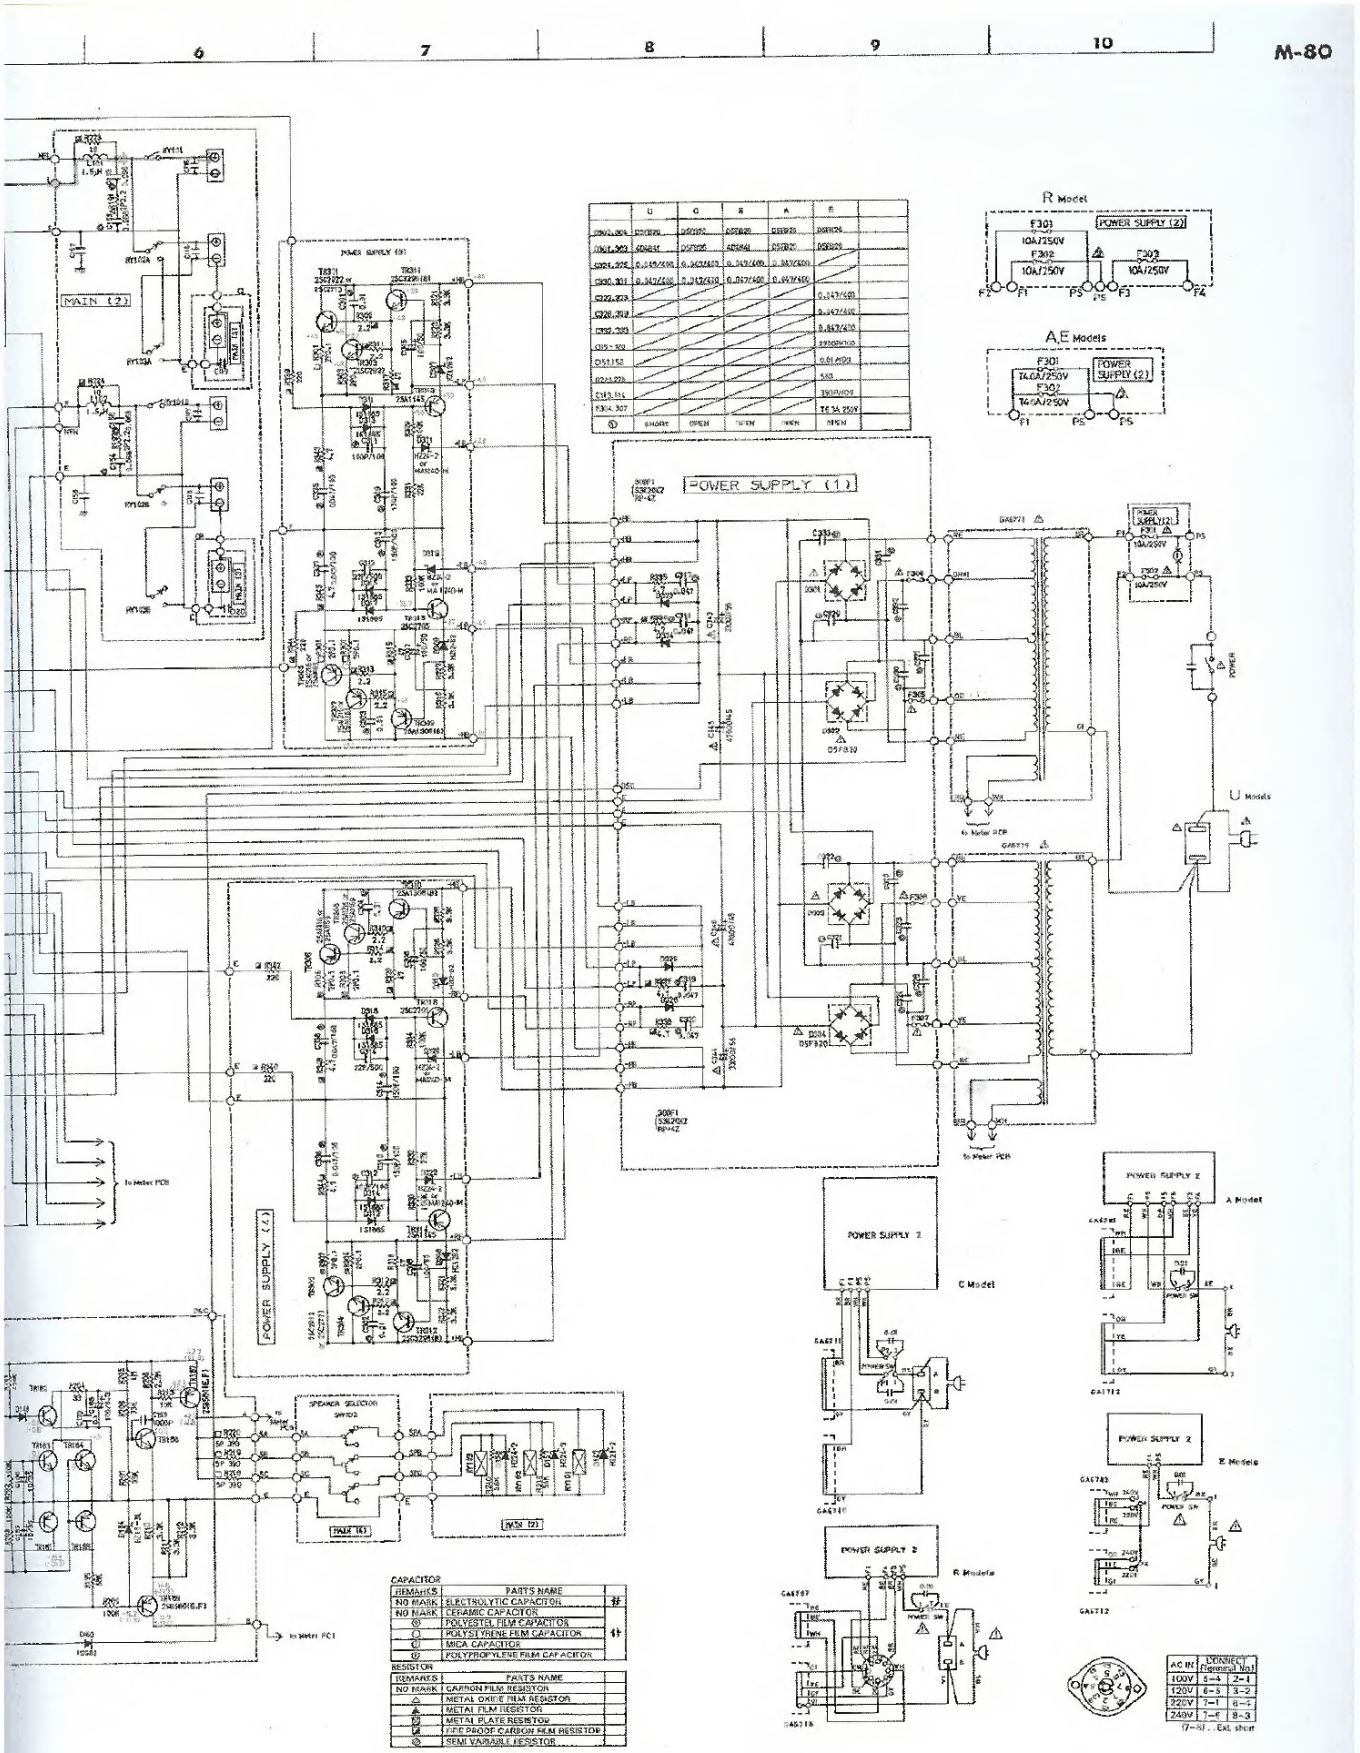

Downloaded from www.Manualslib.com manuals search engine

MANUAL TUNING

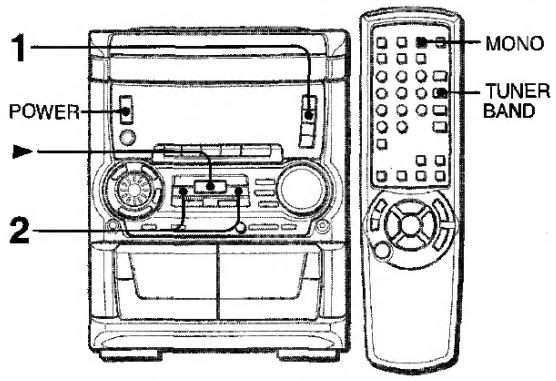

1 Press TUNER BAND repeatedly to select the desired band.

→ FM → AM →

When **TUNER BAND** is pressed while the power is off, the power is turned on directly.

2 Press ◄◄ DOWN or ►► UP to select a station.

Each time the button is pressed, the frequency changes.
When a station is received, "TUNE" is displayed for 2 seconds.
During FM stereo reception, ((◎)) is displayed.

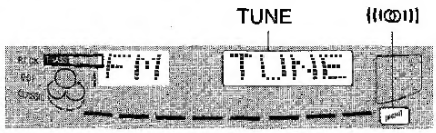

To aearch for a station quickly (Auto Search)

Keep ◄◄ **DOWN** or ►► **UP** pressed until the frequency starts to change rapidly. After tuning in to a station, the search stops. To stop the Auto Search manually, press ◄◄ **DOWN** or ►► **UP**.

- The Auto Search may not stop at stations with very weak signals.

When an FM stereo broadcast contains noise

Press **MONO** on the remote control so that "MONO" appears on the display.
Noise is reduced, although reception is monaural.
To restore stereo reception, repeat the above so that "MONO" disappears.

To change the AM tuning interval

The default setting of the AM tuning interval is 10 kHz/step. If you use this unit in an area where the frequency allocation system is 9 kHz/step, change the tuning interval.
Press **POWER** while pressing ►.
To reset the interval, repeat this procedure.

NOTE

When the AM tuning interval is changed, all preset stations are cleared. The preset stations have to be set again.

Downloaded from www.Manualslib.com manuals search engine

Troubleshooting

Please refer to the following solutions for the failure symptoms that occur the most frequent. If the symptom remains after trying these suggested solutions, please contact your local authorized service center.

Problem: Power LED is not lit when monitor is powered on.

- Check to make sure that the power cord is connected properly.
- Make sure that the extension cord or the surge protector is turned on if the monitor is plugged into a power extension cord or a surge protector.

Problem: No display appears on screen.

- Make sure that the computer switch is in the "**On**" position.
- Make sure that the video cable's D-shaped connector is properly connected to the video adapter port on the back of the PC.
- Check to make sure that the brightness and contrast controls are not turned to their dimmest position.

Problem: Display image is either flickering or unstable.

- Make sure that the video cable's D-shaped connector is connected properly to the video adapter port on the back of the PC.

Problem: Image is bouncing or in a wave pattern.

- Move any electrical devices that can cause interference away from the monitor.
  *(**Note**: Please refers to the FCC statement at the beginning of the manual for more details on display interference.)*